



Fondo 315

→ 60,5 ✕ 40 ↑ 13,8 cm

Adatto a / Suitable for:
Criceti 60 - Easy 60 - Ronny 60



● 31550



● 31563



● 31575



● 31580



Fondo 318

→ 44,5 ✕ 30 ↑ 9,5 cm

Adatto a / Suitable for:
Criceti 2 - Criceti 7 - Criceti 9



● 31883



● 31880



Fondo 341

→ 80 ✕ 49 ↑ 17 cm

Adatto a / Suitable for:
Criceti 16 - Rat 80 - Easy 80 - Ronny 80 - Benny 80 Double 80 - Ferret Flat



● 34100



● 34105



● 34180




● 34150



Fondo 342

→ 100 ✕ 54 ↑ 18 cm

 Adatto a / Suitable for:
Easy 100 - Benny 100 - Ronny 100

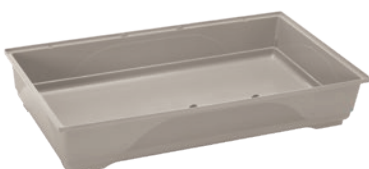

● 34200



● 34250



● 34280




● 34205



Fondo 343

→ 120 ✕ 60 ↑ 20 cm

 Adatto a / Suitable for:
Easy 120 - Ronny 120

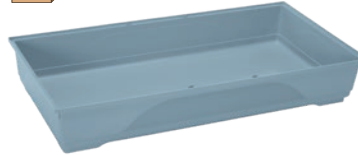

● 34394



● 34350



Fondo 346

→ 57,5 ✕ 37,5 ↑ 11 cm

Adatto a / Suitable for:
Fantasy



● 34686



Fondo 351

→ 69 ✕ 44,5 ↑ 13,5 cm

Adatto a / Suitable for:
Bingo



● 35194



Fondo 352

→ 53,5 ✕ 37 ↑ 13,5 cm

Adatto a / Suitable for:
Yo-Yo Plus



● 35294



Fondo 353

→ 140 ✕ 70 ↑ 21 cm

Adatto a / Suitable for:
Easy 140



● 35350



rodents

birds

fish and turtles

cats & dogs